

































 





 

 





 























Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 Energy Saving	 Sleep / Timer	 FAV/Mark/Char/Nu	 Fav / Marker / PC
 AV Mode	 Picture / Format	 P+	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 Tv/Rad	 TV/Radio /	 3D	 Zoom / Size
 1	 1	 Mute/Delete	 Mute / Dimmer
 2	 2	 P-	 CH- / Page-
 3	 3	 Menu	 Menu / Home
 4	 4	 NetCast	 Sound / Title
 5	 5	 Q.Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Exit	 Exit / Cancel / Clear
 Q.Vlew	 Setup / OPT /	 Back	 Back / Return





	Original	Replacement	Original	Replacement
	GUIDE	Guide / EPG / -/--		
	Red	Red / Netflix / Search		
	Green	Green / APP / Repeat		
	Yellow	Yellow / YouTube / Repeat		
	Blue/L/R/Select	Blue / Prime Video / Random		
	Text	Text / Goto		
	T.Opt	+ Shift + Setup / OPT / Tools		
	Subtitle	Subtitle / EQ		
	Stop	Stop / Hold		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Simplink	Display / Media		
	Info	Info / Angle		
	AD	Audio / Lang I/II		
	APP/*	+ Shift + Green / APP / Repeat		

