
 

 

 

 

 



 





 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Exit	 Exit
 TV/SAT	 Smart	 Recall	 Back
 Mute	 Mute	 Up	 Up
 1	 1	 Down	 Down
 2	 2	 Right	 Right
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 CH&Page+	 Ch +
 8	 8	 CH&Page-	 Ch -
 9	 9	 Red/TTX	 Red
 0	 0	 Green/Sub.T	 Green
 SAT	 Media	 Yellow/Zoom	 Yellow
 FAV	 Pre Ch	 Blue/MP	 Blue
 Menu	 Menu	 Tv/Radio	 TV/R
 EPG	 Guide	 Audio	 Dual





Original		Replacement		Original		Replacement	
	Pause		Pause				
	POS		Format				
	Rec		Rec				
	P/N		Options				
	Info		Info				
	T/S		3D				
	<<		<<				
	>>		>>				
	Play		Play				
	Stop		Stop				

