



| Original | Replacement |
|----------|-----------------------|
| | Power |
| | Mute / Dimmer |
| | Play / Slow |
| | Pause / Step / Freeze |
| | Rec / Rec Mode |
| | << / Tune- |
| | >> / Tune+ |
| | I<< / Preset- |
| | >>I / Preset+ |
| | Audio / Lang I/II |
| | Subtitle / EQ |
| | Zoom / Size |
| | TV/Radio / |
| | Text / Goto |
| | Menu / Home |
| | Up |
| | Info / Angle |

| Original | Replacement |
|----------|-----------------------|
| | Left |
| | OK |
| | Right |
| | Exit / Cancel / Clear |
| | Down |
| | Vol+ |
| | Smart / List |
| | CH+ / Page+ |
| | Vol- |
| | CH- / Page- |
| | 1 |
| | 2 |
| | 3 |
| | 4 |
| | 5 |
| | 6 |
| | 7 |



