
 
 











 
Original	Replacement
 On	 Power
 Off	 Shift + Power
 Sleep	 Sleep
 Display	 Shift + Info
 P.Direct	 Smart
 Surround	 List
 Band/LIP	 Green
 1/Auto	 1
 2/Dolby	 2
 3/dts	 3
 4/CS II	 4
 5/EX / ES	 5
 6/Virtual	 6
 7/M-CH ST	 7
 8/Stereo	 8
 9/Night	 9
 0/7.1 CH In	 0

Original	Replacement
 +10/A/D	 Pre Ch
 Memo/HT EQ	 Guide
 CH/CAT Up	 Ch +
 CH/CAT Down	 Ch -
 SPKR A-B	 Format
 Multi/CAT	 Media
 M Spkr	 TV/R
 Volume+	 Vol +
 Volume-	 Vol -
 Mute	 Mute
 Info	 Info
 Menu	 Menu
 T.Tone/Set Up	 Options
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right




















 























 





 






















Original	Replacement
	 Left
	 Ok
	 Blue
	 Red
	 Subt
	 Dual
	 Shift + Vol +
	 Shift + Vol -
	 Shift + Ch +
	 Shift + Ch -
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7

Original	Replacement
	 Shift + 8
	 Shift + 9
	 Shift + Guide
	 Shift + 0




 

 

 




Original	Replacement	Original	Replacement
 Power	 Power	 Menu	 Menu
 1	 1	 Volume+	 Vol +
 2	 2	 Volume-	 Vol -
 3	 3	 Info	 Info
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Right	 Right
 7	 7	 Left	 Left
 8	 8	 Enter	 Ok
 9	 9	 Pause	 Pause
 0	 0	 Memo/HT EQ	 Guide
 +10	 Pre Ch	 Play	 Play
 CL	 Text	 Stop	 Stop
 CH/CAT Up	 Ch +	 >>	 >>
 CH/CAT Down	 Ch -	 <<	 <<
 Mute	 Mute	 >>	 >>
 T.Tone/Set Up	 Options	 <<	 <<





	Original	Replacement		Original	Replacement
	Disc+	 D	Blue		
	Angle	 A	Red		
	Subtitle	 AD SUBT	Subt		
	Audio	 SOUND DUAL	Dual		









Original	Replacement	Original	Replacement
 Power	 Power	 CH/CAT Up	 Ch +
 1	 1	 CH/CAT Down	 Ch -
 2	 2	 Mute	 Mute
 3	 3	 Menu	 Menu
 4	 4	 Info	 Info
 5	 5	 Volume+	 Vol +
 6	 6	 Volume-	 Vol -
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Band	 Green	 Enter	 Ok
 T.Mode	 Yellow	 T.Disp	 Pause
 P.Scan	 3D	 PTY	 Play
 Memo	 Guide	 F.Direct	 Stop
 CL	 Text	 Tuning+	 >>
 Multi/CAT	 Media	 Tuning-	 <<





Original		Replacement		Original		Replacement	
	Preset+		>>				
	Preset-		<<				

