



















































 

















| Original | | Replacement | | Original | | Replacement | |
|---|----------------|---|--------------------|---|------------|---|---------------|
|  | Power |  | Power |  | CH- |  | CH- / Page- |
|  | CBL/SAT |  | 0 |  | Mute |  | Mute / Dimmer |
|  | Media Player |  | Guide / EPG / -/-- |  | Volume- |  | Vol- |
|  | Blu-ray/DVD |  | 2 |  | Info |  | Info / Angle |
|  | Game |  | Fav / Marker / PC |  | Option |  | Menu / Home |
|  | AUX |  | 7 |  | Up |  | Up |
|  | Tuner |  | 6 |  | Left |  | Left |
|  | Phono |  | 5 |  | Enter |  | OK |
|  | TV Audio |  | 1 |  | Right |  | Right |
|  | CD |  | 3 |  | Back |  | Back / Return |
|  | USB |  | 8 |  | Down |  | Down |
|  | Bluetooth |  | 9 |  | Setup |  | Setup / OPT / |
|  | Internet Radio |  | 4 |  | I<</Tune- |  | I<< / Preset- |
|  | Heos |  | Smart / List |  | I<</Tune- |  | << / Tune- |
|  | CH+ |  | CH+ / Page+ |  | Play/Pause |  | Play / Slow |
|  | ECO |  | Zoom / Size |  | >>I/Tune+ |  | >>I / Preset+ |
|  | Volume+ |  | Vol+ |  | >> / Tune+ |  | >> / Tune+ |





| Original | Replacement |
|----------------|--------------------|
| Power | Power |
| CBL/SAT | 0 |
| Media Player | Guide / EPG / -/-- |
| Blu-ray/DVD | 2 |
| Game | Fav / Marker / PC |
| AUX | 7 |
| Tuner | 6 |
| Phono | 5 |
| TV Audio | 1 |
| CD | 3 |
| USB | 8 |
| Bluetooth | 9 |
| Internet Radio | 4 |
| Heos | Smart / List |
| CH+ | CH+ / Page+ |
| Volume+ | Vol+ |
| CH- | CH- / Page- |

| Original | Replacement |
|----------------|------------------------|
| Mute | Mute / Dimmer |
| Volume- | Vol- |
| Up | Up |
| Left | Left |
| Enter | OK |
| Right | Right |
| Back | Back / Return |
| Down | Down |
| I<</Tune- | I<< / Preset- |
| I<</Tune- | << / Tune- |
| Play/Pause | Play / Slow |
| >>I/Tune+ | >>I / Preset+ |
| >>I/Tune+ | >> / Tune+ |
| Band | Display / Media |
| Stop/Mode | Stop / Hold |
| Memory | Eject / Surround |
| Smart Select 1 | Red / Netflix / Search |



