
 


 


















 
 




 


 

 
 








 



 


 






 




 




 
 

 








 

 

 


 

 
 






Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 List
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text		Shift + Mute
Audio-		Shift + Vol -
Tone-		Media
Audio+		Shift + Vol +
Color+ P.Std		Shift + Format
On/Tim		Shift + Subt
Store Text		Shift + Text
AV 2		Shift + AV

Original	Replacement	
Search		Shift + TV/R
Bright+ Mode		Shift + Menu
Disp		Shift + Info
Tune-		Shift + Left
Aft/Caf		Shift + Ok
Store		Smart
Tune+		Shift + Right
Bright- Sys		Shift + Exit
Contrast+		Shift + Ch +
Color- S.Std		Dual
Contrast-		Shift + Ch -
3.*		Shift + Guide
Nicam/Mono		Shift + Green
Level L		Shift + Yellow
Level R/Woofer		Shift + Blue
4.# 16:9		Format



Original	Replacement	Original	Replacement
Power		Power	
Recall		Up	
1		Left	
2		OK	
3		Right	
4		Down	
5		Vol +	
6		Vol -	
7		LCD Menu	
8		Exit / DVD Setup	
9		Exit / DVD Setup	
0		D.Menu	
AV / Input		D.Disp	 + 
-/--	 + 	Red / Prog	
EPG		Green / Intro	
P +		Yellow / Repeat	
P -		Blue / A-B	



Original	Replacement	Original	Replacement
Title	 Smart	>>I / Hold	 +  Shift + Stop
Eject / PC Auto	 +  Shift + Exit	Reveal / Angle	 Format
<< / Index	 <<	Subpage /	 Eject
Play/Pause / Fav	 Play	Lang / Audio	 +  Shift + Dual
Play/Pause / Fav	 Pre Ch	□ / Goto	 TV/R
>> / Size	 >>	Subtitle	 Subt
Rec / S.Mode	 Rec	Info	 Info
Rec / S.Mode	 Dual		
Step >I / Fav +	 +  Shift + Play		
Step >I / Fav +	 +  Shift + Up		
Pause / P.Mode	 Pause		
Pause / P.Mode	 +  Shift + Format		
I<< / Text	 I<<		
I<< / Text	 Text		
Stop / Fav -	 Stop		
Stop / Fav -	 +  Shift + Down		
>>I / Hold	 >>I		

