
 





 







 





 
 
 
 


 

 



 
 


 
 
 
 
 

 
 
 
 
 
 
 

 

 



 

 
 
 



 
 





Original		Replacement		Original		Replacement	
	Power		Power		2		2
	Mute		MUTE		3		3
	Up		UP		4		4
	Down		DOWN		5		5
	Right		RIGHT		6		6
	Left		LEFT		7		7
	OK		OK		8		8
	Menu		MENU		9		9
	Exit		EXIT		0		0
	Red / UHF		Red (A)		EPG		- / - / EPG
	Green / Audio		Green (B)		Liste		P/C / FAV
	Audio		Audio		Vol +		VOL +
	Yellow / Pause		Yellow (C)		Vol -		VOL -
	Pause		Pause		Ch +		CH +
	Blue / Back		Blue (D)		Ch -		CH -
	Back		BACK		Page +		Last
	1		1		Page -		First



