



 



 






 




 



 

 



 





 




Original	Replacement	Original	Replacement
	Power		FAV
	Tv/VCR		P/C / FAV
	Mute		VOD
	Info		OPT
	Pause		OPT+
	Menu		BACK
	EPG		1
	Exit		2
	Up		3
	Down		4
	Right		5
	Left		6
	OK		7
	CH+		8
	CH-		9
	Vol+		0
	Vol-		Tv/Rad
			Lang
			S-T
			TXT





Original	Replacement	Original	Replacement
 Red	 Red (A)		
 Green	 Green (B)		
 Yellow	 Yellow (C)		
 Blue	 Blue (D)		

