




 











 















 



 






























Original	Replacement	Original	Replacement
 Standby	 Power	 D.Menu/Index	 D.Menu / Top
 Mute	 Mute / Dimmer	 Goto/Subpage	 Text / Goto
 Play	 Play / Slow	 Source	 AV / Input / RDS
 Pause	 Pause / Step / Freeze	 Menu	 Menu / Home
 Stop	 Stop / Hold	 Up	 Up
 Rec	 Rec / Rec Mode	 Angle/Text	 Info / Angle
 <<	 << / Tune-	 Left	 Left
 >>	 >> / Tune+	 OK	 OK
 I<<	 I<< / Preset-	 Right	 Right
 >>I	 >>I / Preset+	 Exit	 Exit / Cancel / Clear
 S.Mode	 Sound / Title	 Down	 Down
 Audio/Tv/Radio	 Audio / Lang I/II	 Recall	 Back / Return
 Subtitle	 Subtitle / EQ	 Vol+	 Vol+
 Eject/Auto	 Eject / Surround	 CH+	 CH+ / Page+
 P.Mode	 Picture / Format	 Vol-	 Vol-
 Zoom/Hold	 Zoom / Size	 Display	 Display / Media
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-





Original	Replacement	Original	Replacement
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	EPG		Guide / EPG / -/--
	0		0
	FAV		Fav / Marker / PC
	Red / Del / Prog		Red / Netflix / Search
	Green / Rename		Green / APP / Repeat
	Yellow / Move / Repeat		Yellow / YouTube / Repeat
	Blue / Skip / A-B		Blue / Prime Video / Random
	I>/Lang		
			Shift + >>1 / Preset+

Original	Replacement	Original	Replacement
	Nicam		
			Shift + Sound / Title
	Audio/Tv/Radio		
			Shift + Audio / Lang I/II
	Aspect		
			Shift + Picture / Format
	Title/Size		
			Shift + Zoom /
	D.Disp/Reveal		
			Shift + D.Menu / Top Menu
	I>/Lang		
			Shift + Right
	DVD Setup		
			Shift + 2
	FAV+		
			Shift + 9
	-/--		
			Shift + Guide / EPG / -/--
	FAV-		
			Shift + Fav / Marker / PC

