





















 








 






 



 









 



















Original		Replacement		Original		Replacement	
	Standby		Power		8		8
	Auto / Eject		Eject / Surround		9		9
	Mute		Mute / Dimmer		Input		AV / Input / RDS
	P.Mode		Picture / Format		0		0
	S.Mode		Sound / Title		Recall		Back / Return
	Info		Info / Angle		Sleep		Sleep / Timer
	Nicam		Audio / Lang I/II		Up		Up
	1		1		Left		Left
	2		2		Enter		OK
	3		3		Right		Right
	Menu		Menu / Home		Down		Down
	4		4		CH-		CH- / Page-
	5		5		CH+		CH+ / Page+
	6		6		Vol-		Vol-
	Exit / D.Setup		Setup / OPT /		Vol+		Vol+
	Exit / D.Setup		Exit / Cancel / Clear		Text / Slow		Text / Goto
	7		7		Text / Slow		Shift + Play / Slow





Original	Replacement	Original	Replacement
Hold / Play/Pause	Play / Slow	FAV+ / Goto	+ Shift + Up
Hold / Play/Pause	+ Shift + Stop /	FAV+ / Goto	+ Shift + Text /
Hold / Play/Pause	Pause / Step / Freeze	Red / D.Prog	TV/Radio /
Page+ / Stop	Stop / Hold	Red / D.Prog	Red / Netflix / Search
Page+ / Stop	+ Shift + CH+ /	Green / Step	+ Shift + Pause / Step /
Page- / Zoom	Zoom / Size	Green / Step	Green / APP / Repeat
Page- / Zoom	+ Shift + CH- /	Yellow / RPT	+ Shift + Green / APP /
[≡i] / I<<	I<< / Preset-	Yellow / RPT	Yellow / YouTube / Repeat
[≡□] / >>I	>>I / Preset+	Blue / A-B	+ Shift + Yellow / YouTube /
[≡?] / <<	<< / Tune-	Blue / A-B	Blue / Prime Video / Random
[≡●] / >>	>> / Tune+	List / Angle	+ Shift + Info / Angle
EPG / D.Menu	D.Menu / Top	List / Angle	Smart / List
EPG / D.Menu	Guide / EPG / -/--	SUB-T	Subtitle / EQ
FAV / D.Title	+ Shift + Sound / Title	Aspect	+ Shift + Picture / Format
FAV / D.Title	Fav / Marker / PC	Rec	Rec / Rec Mode
FAV- / D.Disp	Display / Media		
FAV- / D.Disp	+ Shift + Down		

