


 


 


 
 



 







 

 
 
 



 



 

 



 


 






 

 

 
 

 
 
 
 

 



 




Original	Replacement	Original	Replacement
	Power		Power
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK/Select		Ok
	M		Menu
	[i]/Info		Info
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Exit/-/--		Exit
	PP		Pre Ch
	Swap/P<P		Smart
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	I-II		Dual
	Tv/DTV		TV/R
	AV/Source		AV
	Red/↑		Red
	Green/↓		Green
	Yellow		Yellow
	Blue		Blue
	[≡]		Text





Original		Replacement		Original	Replacement
	[≡+]/[X]		Format		
	[≡x]/[■ ■]		Subt		
	[≡o]		Options		
	[≡♦]/[+]/Wide		3D		
	[≡.]/[■]		Back		
	[≡?]		Media		
	Guide/[≡i]		Guide		

