
 
 

 


 

 






 



 
 


 

 


 





 


 


















 
 




 






Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7








 



 




 

 



 
 



 

 


Original	Replacement	Original	Replacement
8	 8	Surround	 +  Shift + Red
9	 9	Nicam/Mono	 +  Shift + Green
Guide -/-- 1.	 GUIDE	Level L	 +  Shift + Yellow
0/10	 0	Level R/Woofer	 +  Shift + Blue
2.Fav P/C 2.	 PRE-CH		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
Audio+	 +  Shift + Pause		
Tone-	 <<		
Tone+	 >>		
On/Tim	 +  Shift + Subt		
Game Coo	 +  Shift + Eject		
Disp	 +  Shift + Info		
Browse	 +  Shift + Back		
3.*	 +  Shift + Guide		





Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Mute	 Mute	Menu Right	 Right
Update	 Play	Menu Off	 Exit
Reveal	 Pause	Menu Down	 Down
Txt Stop	 Stop	Back	 Back
Info	 Rec	Volume+	 Vol +
Subt.List	 Subt	Chan.Up	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Return TV	 TV/R	Menu audio	 Dual
Menu video	 D. Menu	Chan.Down	 Ch -
Text	 Text	1	 1
Txt Expand	 Eject	2	 2
TV/AV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7



Original	Replacement	
8		8
9		9
Guide -/-- 1.		Guide
0/10		0
2.Fav P/C 2.		Pre Ch
Red		Red
Green		Green
Yellow		Yellow
Blue		Blue
Rotate Text	 + 	Shift + Mute
Audio+	 + 	Shift + Pause
Tone-		<<
Tone+		>>
On/Tim		Smart
Off/Tim		Media
Mix Scan	 + 	Shift + TV/R
Store Text	 + 	Shift + Text

Original	Replacement	
Color+ P.Std	 + 	Shift + Format
Game Coo	 + 	Shift + Eject
Bright+ Mode	 + 	Shift + Menu
Search	 + 	Shift + Up
Disp	 + 	Shift + Info
Tune-	 + 	Shift + Left
Tune+	 + 	Shift + Right
Store	 + 	Shift + Down
Browse	 + 	Shift + Back
Contrast+		>>
Color- S.Std	 + 	Shift + Dual
Contrast-		<<
3.*	 + 	Shift + Guide
4.# 16:9		Format
Surround	 + 	Shift + Red
Nicam/Mono	 + 	Shift + Green
Level L	 + 	Shift + Yellow



Original	Replacement	Original	Replacement
Level R/Woofer	 +  Shift + Blue		

