 










 








Original	Replacement
 TV System	 Shift + TV/Radio / Program
 Power	 Power
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Recall	 Shift + Back / Return
 A-B	 Shift + 0
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Text	 Text / Goto
 0	 0

Original	Replacement
 Edit	 Fav / Marker / PC
 Pause	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Up / CH+	 Shift + Up
 Up / CH+	 Up
 Play	 Play / Slow
 Left	 Left
 Enter	 OK
 Right	 Right
 Back	 Back / Return
 Down / CH-	 Shift + Down
 Down / CH-	 Down
 Home	 Menu / Home
 Stop	 Stop / Hold
 Favor/Vol + / Sel	 Vol+
 Source	 AV / Input / RDS
 ← Skip	 << / Tune-





Original	Replacement
 Favor/Vol - / Load	 Vol-
 Time Shift	 Shift + Sleep / Timer
 Skip →	 >> / Tune+
 Timer Rec	 Sleep / Timer
 EPG	 Guide / EPG / -/--
 Dimmer	 Shift + Mute / Dimmer
 DTV	 Shift + 2
 Red / <<<	 Shift + Red / Netflix / Search
 Red / <<<	 Red / Netflix / Search
 Green / >>>	 Shift + Green / APP / REPEAT
 Green / >>>	 Green / APP / Repeat
 Yellow /  <<<	 Shift + Yellow / YouTube / REPEAT A-B
 Yellow /  <<<	 Yellow / YouTube / Repeat
 Blue / >>>	 Shift + Blue / Prime Video / RANDOM
 Blue / >>>	 Blue / Prime Video / Random
 Zoom	 Zoom / Size
 Eject / Goto	 Eject / Surround

Original	Replacement
 Display	 Display / Media
 TV HMR	 TV/Radio /
 Mute	 Mute / Dimmer
 LAN	 Sound / Title
 USB	 Shift + 8
 HDD	 Shift + 7

