



Original	Replacement	Original	Replacement
	Power		Tv Guide
	Mute		Guide / EPG / -/-
	DTV		0
	DTV		Recall
	Radio		Vol+
	Radio		P.Mode
	USB		CH+ / Page+
	DVD		S.Mode
	1		Vol-
	2		FAV
	3		CH- / Page-
	4		Menu
	5		Up
	6		Exit
	7		Left
	8		OK
	9		Right
			Source





Original	Replacement	Original	Replacement
	Down		Down
	Info		Info / Angle
	Aspect		Shift + Picture / Format
	Sleep		Sleep / Timer
	Audio		Audio / Lang I/II
	Subtitle		Subtitle / EQ
	Text		Text / Goto
	Text Hold		Shift + Stop /
	Zoom/Text/DVD		Zoom / Size
	Power/Display		Display / Media
	Power/Display		Shift + Power
	DVD Menu		D.Menu / Top
	Rec		Rec / Rec Mode
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stop/Eject		Stop / Hold
	Stop/Eject		Eject / Surround
	Rec List/DVD		Setup / OPT /
	Rec List/DVD		Smart / List
	<< PVR/DVD		<< / Tune-
	>> PVR/DVD		>> / Tune+
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Red/Goto		Shift + Text /
	Red/Goto		Red / Netflix / Search
	Green/A-B		Green / APP / Repeat
	Green/A-B		Shift + Yellow / YouTube /
	Yellow/Angle/3D		Yellow / YouTube / Repeat
	Yellow/Angle/3D		Shift + Info / Angle
	Blue/Repeat		Blue / Prime Video / Random
	Blue/Repeat		Shift + Green / APP /

