































 





















 



 

 

 

 








Original	Replacement	Original	Replacement
	On		Power
	Standby		Shift + Power
	V1		1
	V2		4
	V3		7
	Multi CH		8
	DVD		2
	Tape		5
	Tuner		6
	CD		3
	Tuner/Dimmer		0
	Tuner/Dimmer		Shift + Mute / Dimmer
	Sleep		Sleep / Timer
	CH/Disc+		CH+ / Page+
	Vol+		Vol+
	CH/Disc-		CH- / Page-
	Vol-		Vol-
	SP A/B		Sound / Title
	Up		Up
	Muting		Mute / Dimmer
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Stereo		Red / Netflix / Search



































 



 

 






 






 

 



 

 

 







Original	Replacement	Original	Replacement
 Surround	 Eject / Surround		
 Surround	 Green / APP / Repeat		
 <	 Yellow / YouTube / Repeat		
 >	 Blue / Prime Video / Random		
 Test Tone	 Text / Goto		
 CH Sel	 Smart / List		
 Level-	 Shift + CH- /		
 Level+	 Shift + CH+ /		
 Display	 Display / Media		
 L.Night/HDD	 D.Menu / Top		
 Cine FLTR/DVD	 Menu / Home		







Original	Replacement	Original	Replacement
	On		Power
	Standby		Shift + Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	+10		Guide / EPG / -/--
	0		0
	CLR		Exit / Cancel / Clear
	CH/Disc+		CH+ / Page+
	CH/Disc-		CH- / Page-
	Top Menu		D.Menu / Top
	Up		Up
	Muting/Previous Menu		Menu / Home
	Muting/Previous Menu		Mute / Dimmer
	Left		Left
	Enter		OK
	Right		Right
	Return		Back / Return
	Down		Down
	Setup		Setup / OPT /
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Audio		Audio / Lang I/II





	Original	Replacement		Original	Replacement
	Subtitle	Subtitle / EQ			
	Random	Blue / Prime Video / Random			
	Repeat	Green / APP / Repeat			
	Display	Display / Media			







Original	Replacement	Original	Replacement
 On	 Power	 Left	 Left
 1	 1	 Enter	 OK
 2	 2	 Right	 Right
 3	 3	 Down	 Down
 4	 4	 Setup	 Setup / OPT /
 5	 5	 Pause	 Pause / Step / Freeze
 6	 6	 Play	 Play / Slow
 7	 7	 Stop	 Stop / Hold
 8	 8	 <<	 << / Tune-
 9	 9	 >>	 >> / Tune+
 0	 0	 On CD	 Shift + Power
 CH/Disc+	 CH+ / Page+	 Standby CD	 Shift + Mute / Dimmer
 CH/Disc-	 CH- / Page-	 1 CD	 Shift + 1
 Guide	 Guide / EPG / -/--	 2 CD	 Shift + 2
 Up	 Up	 3 CD	 Shift + 3
 Muting/Previous Menu	 Menu / Home	 4 CD	 Shift + 4
 Muting/Previous Menu	 Mute / Dimmer	 5 CD	 Shift + 5

Original	Replacement	Original	Replacement
 Left	 Left	 Left	 Left
 Enter	 OK	 Right	 Right
 Right	 Right	 Down	 Down
 Down	 Down	 Setup	 Setup / OPT /
 Setup	 Setup / OPT /	 Pause	 Pause / Step / Freeze
 Pause	 Pause / Step / Freeze	 Play	 Play / Slow
 Play	 Play / Slow	 Stop	 Stop / Hold
 Stop	 Stop / Hold	 <<	 << / Tune-
 <<	 << / Tune-	 >>	 >> / Tune+
 >>	 >> / Tune+	 On CD	 Shift + Power
 On CD	 Shift + Power	 Standby CD	 Shift + Mute / Dimmer
 Standby CD	 Shift + Mute / Dimmer	 1 CD	 Shift + 1
 1 CD	 Shift + 1	 2 CD	 Shift + 2
 2 CD	 Shift + 2	 3 CD	 Shift + 3
 3 CD	 Shift + 3	 4 CD	 Shift + 4
 4 CD	 Shift + 4	 5 CD	 Shift + 5
 5 CD	 Shift + 5		





Original	Replacement
6 CD	+  Shift + 6
7 CD	+  Shift + 7
8 CD	+  Shift + 8
9 CD	+  Shift + 9
+10 CD	+  Shift + Guide / EPG / -/-
0 CD	+  Shift + 0
CLR CD	+  Shift + Exit / Cancel / Clear
CH/Disc + CD	+  Shift + CH+ /
CH/Disc- CD	+  Shift + CH- /
Pause CD	+  Shift + Pause / Step /
Play CD	+  Shift + Play /
Stop CD	+  Shift + Stop /
<< CD	+  Shift + << /
>> CD	+  Shift + >> /
I<< CD	+  Shift + I<< / Preset-
>>I CD	+  Shift + >>I / Preset+
Random CD	+  Shift + Blue / Prime Video / Random

Original	Replacement
Repeat CD	+  Shift + Green / APP /
Display CD	+  Shift + Display / Media







Original	Replacement
	 Power
	 Shift + Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 CH+ / Page+
	 CH- / Page-
	 Up
	 Left
	 OK

Original	Replacement
	 Right
	 Down
	 Setup / OPT /
	 Pause / Step / Freeze
	 Play / Slow
	 Stop / Hold
	 << / Tune-
	 >> / Tune+

