


























































 



 



 




Original	Replacement	Original	Replacement
 Power	 Power	 CD	 >> / Tune+
 Sleep	 Sleep / Timer	 Disc CD	 Guide / EPG / -/-
 Speakers A	 Sound / Title	 CD 1	 Shift + 1
 Speakers B	 Audio / Lang I/II	 CD 2	 Shift + 2
 Input PHONO	 4	 CD 3	 Shift + 3
 Input TUNER	 6	 CD 4	 Shift + 4
 Input CD	 3	 CD 5	 Shift + 5
 Input LINE	 1	 CD 6	 Shift + 6
 Input TAPE-1	 5	 CD 7	 Shift + 7
 Input TAPE-2	 2	 CD 8	 Shift + 8
 Eject / Surround	 Eject / Surround	 CD 9	 Shift + 9
 Stop / Hold	 Stop / Hold	 CD 0	 Shift + 0
 Pause / Step / Freeze	 Pause / Step / Freeze	 CD +10	 Shift + Guide / EPG / -/-
 Play / Slow	 Play / Slow	 Memory	 Fav / Marker / PC
 I<< / Preset-	 I<< / Preset-	 Clear	 Exit / Cancel / Clear
 >>I / Preset+	 >>I / Preset+	 Deck A	 Left
 << / Tune-	 << / Tune-	 Deck A	 Right





Original	Replacement
◀ Deck A	Down
▶ Deck A	Up
■ Deck A	OK
■ Deck B	Shift + Eject / Surround
◀ Deck B	Shift + Left
▶ Deck B	Shift + Right
◀ Deck B	Shift + Down
▶ Deck B	Shift + Up
●/ Deck B	Shift + Info / Angle
■ Deck B	Shift + OK
Muting	Mute / Dimmer
Volume Up	Vol+
Volume Down	Vol-
TUNER FM	Display / Media
TUNER AM	Smart / List
Tuner Preset	CH- / Page-
Tuner Preset Up	CH+ / Page+

Original	Replacement





Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep / Timer
	Speakers A		Sound / Title
	Speakers B		Audio / Lang I/II
	Input PHONO		4
	Input TUNER		6
	Input CD		3
	Input LINE		1
	Input TAPE-1		5
	Input TAPE-2		2
	CD		Eject / Surround
	CD		Stop / Hold
	CD		Pause / Step / Freeze
	CD		Play / Slow
	CD		I<< / Preset-
	CD		>>I / Preset+
	CD		<< / Tune-
	CD 1		>> / Tune+
	CD 2		Disc CD
	CD 3		Guide / EPG / -/-
	CD 4		Shift + 1
	CD 5		Shift + 2
	CD 6		Shift + 3
	CD 7		Shift + 4
	CD 8		Shift + 5
	CD 9		Shift + 6
	CD 0		Shift + 7
	CD +10		Shift + 8
	Memory		Shift + 9
	Clear		Shift + 0
	Deck A		Shift + 10
	Deck A		Memory
	Deck A		Clear
	Deck A		Fav / Marker / PC
	Deck A		Exit / Cancel / Clear
	Deck A		NETFLIX
	Deck A		APP
	Deck A		YouTube
	Deck A		Prime Video
	Deck A		SEARCH
	Deck A		REPEAT
	Deck A		REPEAT A-B
	Deck A		RANDOM





Original	Replacement
◀◀ Deck A	Down
▶▶ Deck A	Up
■ Deck A	OK
▶ Deck B	Shift + Eject / Surround
◀ Deck B	Shift + Left
▶ Deck B	Shift + Right
◀◀ Deck B	Shift + Down
▶▶ Deck B	Shift + Up
●/ Deck B	Shift + Info / Angle
■ Deck B	Shift + OK
Muting	Mute / Dimmer
Volume Up	Vol+
Volume Down	Vol-
TUNER FM	Display / Media
TUNER AM	Smart / List
Tuner Preset	CH- / Page-
Tuner Preset Up	CH+ / Page+

Original	Replacement

