
 











 



 












Original	Replacement
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Menu / Home
	 0
	 Guide / EPG / -/--
	 Vol-
	 Vol+
	 CH- / Page-
	 CH+ / Page+

Original	Replacement
	 Up
	 Left
	 OK
	 Right
	 Down
	 Red / Netflix / Search
	 Mute / Dimmer
	 Green / APP / Repeat
	 AV / Input / RDS
	 Yellow / YouTube / Repeat
	 TV/Radio /
	 Blue / Prime Video / Random
	 Text / Goto

