
 
 





 



 


 
 
 



 
 

 

 
 
 


 
 
 



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Menu Down	 Down
Slow Up	 Ch +	Volume+	 Vol +
Stop	 Stop	Next	 >>
Pause	 Pause	Volume-	 Vol -
Subt.	 Subt	1	 1
Rep/A-B	 TV/R	Return	 Back
Title	 List	Progr.	 Sleep
Auto/Track	 Smart	2	 2
Repeat/1/All	 Text	3	 3
DVD/TV	 AV	Top Menu	 D. Menu
Menu	 Menu	Prev.	 <<
Menu Up	 Up	4	 4
Display	 Info	5	 5
Zoom	 +  Shift + Eject	6	 6
Menu Left	 Left	7	 7



Original	Replacement	Original	Replacement
8	 8	Angle	 +  Shift + Red
9	 9	Clear/00:00	  Exit
+10	 Guide	Random	 +  Shift + Yellow
Game	 3D		
Video	 Media		
0	 0		
C/CH	 Pre Ch		
Open/Close	 Eject		
Np	 +  Shift + Subt		
Timer	 +  Shift + AV		
Record	 Rec		
Rewind	 <<		
Play	 Play		
F.Forward	 >>		
Setup	 +  Shift + TV/R		
Remain	 +  Shift + Back		
Audio	 Dual		

