
















 



 




Original	Replacement
 Power	 Power
 SD/HC	 Shift + Display / Media
 Input TV	 Shift + AV / Input / RDS
 Input AV	 AV / Input / RDS
 Aspect	 Picture / Format
 Menu	 Menu / Home
 N	 Shift + Up
 Direct Tv Rec	 D.Menu / Top
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Viera Tools	 Smart / List
 Viera Link	 Display / Media
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right

Original	Replacement
 Option	 Setup / OPT /
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Text	 Text / Goto
 [≡♦]/Sttl	 Subtitle / EQ
 [≡i]/Index	 Shift + Info / Angle
 [≡+]/Hold	 Shift + Stop /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6





	Original	Replacement		Original	Replacement
	7	7		Pause/Step	Pause / Step / Freeze
	8	8		Rec	Rec / Rec Mode
	9	9			
	Mute	Mute / Dimmer			
	0	0			
	OIO	Shift + Smart / List			
	Vol+	Vol+			
	CH+	CH+ / Page+			
	Vol-	Vol-			
	CH-	CH- / Page-			
	Power Down	Shift + Power			
	Programme	Shift + CH- /			
	Programme Up	Shift + CH+ /			
	<</l<<	<< / Tune-			
	Play	Play / Slow			
	>>/>>	>> / Tune+			
	Stop	Stop / Hold			

