 
 
 




 
 

 




Original	Replacement	Original	Replacement
 Power	 Power	 [≡/STTL]	 Subt
 Menu	 Menu	 [≡]/Text	 Text
 Guide	 Guide	 Mute	 Mute
 Input Tv	 TV/R	 CH+	 Ch +
 Input AV	 AV	 CH-	 Ch -
 Red	 Red	 Vol+	 Vol +
 Green	 Green	 Vol-	 Vol -
 Yellow	 Yellow	 OK	 Ok
 Blue	 Blue	 Up	 Up
 Exit	 Exit	 Down	 Down
 i	 Info	 Right	 Right
 Option	 Options	 Left	 Left
 Return/Back	 Back	 ?/Help	 Dual
 Netflix	 Media	 Recall	 Pre Ch
 Home	 Smart	 1	 1
 APPS	 Shift +  Media	 2	 2
 [+]/Aspect	 3D	 3	 3

Original	Replacement	Original	Replacement
 [≡/STTL]	 Subt	 TV	 DVD
 [≡]/Text	 Text	 SAT	 AUX
 Mute	 Mute	 MUTE	 SHIFT
 CH+	 Ch +	 PLAY MODE	 REC MODE
 CH-	 Ch -	 TV	 DUAL
 Vol+	 Vol +	 DUAL	 SUBT
 Vol-	 Vol -	 SOUND	 AD
 OK	 Ok	 SETTINGS	 OPT
 Up	 Up	 LIST	 PICTURE
 Down	 Down	 PROG	 ECO
 Right	 Right	 SLEEP	 TV/R
 Left	 Left	 FORMAT	 3D
 ?/Help	 Dual	 E-MANUAL	 REPEAT
 Recall	 Pre Ch	 D.MENU	 ZOOM
 1	 1	 TEXT	 TIMER
 2	 2	 TOP MENU	 DISPLAY INFO
 3	 3	 MENU	 OK
		 CLEAR	 RETURN BACK
		 EXIT	 HOME
		 VOL+	 SMART
		 VOL-	 APP
		 1	 MEDIA
		 2	 CH+
		 3	 CH-
		 GUIDE	 0
		 A	 FAV
		 B	 PRE-CH
		 C	 A
		 D	 B





	Original	Replacement	Original	Replacement
	4			
	5			
	6			
	7			
	8			
	9			
	0			
	Play			
	Pause			
	Stop			
	Rec			
	>>			
	<<			
	>>			
	<<	