



Original	Replacement
DVD/VHS Power	Power
TV Power	Shift + Power
TV CH +	Shift + CH+ /
TV Volume +	Vol+
Drive Select	Smart / List
TV AV	Shift + AV / Input / RDS
TV CH -	Shift + CH- /
TV Volume -	Vol-
1	1
2	2
3	3
CH + / Tracking/V-Lock +	CH+ / Page+
4	4
5	5
6	6
CH - / Tracking/V-Lock -	CH- / Page-
7	7

Original	Replacement
8	8
9	9
ShowView	Sound / Title
* / Reset	Guide / EPG / -/-
0	0
Input Select	AV / Input / RDS
Delete	Exit / Cancel / Clear
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
Time Slip / << Jet Rew	Shift + << /
Manual Skip	Sleep / Timer
Prog Check	Setup / OPT /





Original	Replacement
Direct Navigator	D.Menu / Top
Left / <	Left
Enter	OK
Up	Up
Right /   >	Right
Functions	Menu / Home
Sub Menu	Info / Angle
Down	Down
Return	Back / Return
Audio	Audio / Lang I/II
Display	Display / Media
Create Chapter	TV/Radio /
Status	Picture / Format
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	Text / Goto
Direct TV Rec	Zoom / Size

Original	Replacement

