






 


 

















 
 
 

 


 

 




 



 










Original	Replacement
 Power	 Power
 Menu	 Menu
 Guide	 Guide
 Input Tv	 TV/R
 Input AV	 AV
 i	 INFO
 X/Exit	 EXIT
 APPS	 APP MEDIA
 Netflix	 SHIFT + APP MEDIA Shift + Media
 Home	 HOME SMART Smart
 Option	 SETTINGS OPT Options
 Back/Return	 RETURN BACK Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK

Original	Replacement
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue
 Text	 REPEAT TEXT Text
 STTL	 AD SUBT Subt
 Aspect	 PICTURE FORMAT Format
 Vol+	 + VOL Vol +
 Vol-	 VOL - Vol -
 Mute	 MUTE Mute
 CH+	 + CH Ch +
 CH-	 CH - Ch -
 1	 1
 2 <sub>abc</sub>	 2
 3 <sub>def</sub>	 3
 4 <sub>ghi</sub>	 4
 5 <sub>jkl</sub>	 5





	Original	Replacement	Original	Replacement
	6			
	7			
	8			
	9			
	0			
	eHelp			
	Last View			
	<<			
	Play			
	>>			
	I<<			
	Pause			
	>>I			
	Stop			
	Rec			

