

 



























 


















 














 

 



Original	Replacement
 Standby AV	 Power
 Info	 Info / Angle
 Direct Navigator	 Smart / List
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Exit	 Exit / Cancel / Clear
 Edit	 Fav / Marker / PC
 <<	 << / Tune-
 >>	 >> / Tune+
 Delete	 Back / Return
 Prog/Check	 Setup / OPT /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK
 Red	 Red / Netflix / Search

Original	Replacement
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Live	 Display / Media





Original	Replacement	Original	Replacement
 Tv/Radio	 TV/Radio /		
 Rec	 Rec / Rec Mode		
 Rec Pause	 +  Shift + Pause / Step /		
 Viewer	 Zoom / Size		
 Skip	 AV / Input / RDS		
 Set Book Mark	 Subtitle / EQ		
 Go Book Mark	 +  Shift + TV/Radio / Program		
 Vol+	 Vol+		
 Vol-	 Vol-		
 Timer Rec	 Sleep / Timer		
 Replay	 >>I / Preset+		
 Audio	 Audio / Lang I/II		
 Aspect	 Picture / Format		

Original	Replacement	Original	Replacement





Original	Replacement
Power Tv	Shift + Power
Tv/AV Tv	Shift + AV / Input / RDS
CH+ TV	CH+ / Page+
CH- Tv	CH- / Page-
Vol+ Tv	Shift + Vol+
Vol- Tv	Shift + Vol-
Standby AV	Power
Info	Info / Angle
Direct Navigator	Smart / List
Menu	Menu / Home
EPG	Guide / EPG / -/--
Exit	Exit / Cancel / Clear
Edit	Fav / Marker / PC
<<	<< / Tune-
>>	>> / Tune+
Delete	Back / Return
Prog/Check	Setup / OPT /

Original	Replacement
Up	Up
Down	Down
Left	Left
Right	Right
OK	OK
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
1	1
2	2
3	3
4	4
5	5





Original		Replacement	
	6		6
	7		7
	8		8
	9		9
	0		0
	Live		Display / Media
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	Rec Pause	+	Shift + Pause / Step /
	Viewer		Zoom / Size
	Skip		AV / Input / RDS
	Set Book Mark		Subtitle / EQ
	Go Book Mark	+	Shift + TV/Radio / Program
	Vol+		Vol+
	Vol-		Vol-
	Timer Rec		Sleep / Timer
	Replay		I<< / Preset-

Original		Replacement	
	Audio		Audio / Lang I/II
	Aspect		Picture / Format

