









 





 





 



























 















 





Original	Replacement
 Power	 Power
 Media Player	 Display / Media
 Input Tv	 TV/Radio /
 Input AV	 AV / Input / RDS
 Menu	 Menu / Home
 Text	 Text / Goto
 STTL	 Subtitle / EQ
 Guide	 Guide / EPG / -/-
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Option	 Setup / OPT /
 Back/Return	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK

Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Aspect	 Picture / Format
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7



