


 










 


 




















Original	Replacement
 Power	 Power
 Play	 Play / Slow
 Rec	 Rec / Rec Mode
 Input	 AV / Input / RDS
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>	 >> / Tune+
 G	 Guide / EPG / -/--
 i	 Info / Angle
 Exit	 Exit / Cancel / Clear
 Back	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 OK	 OK

Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Home	 Menu / Home
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Original		Replacement	
	8		8
	9		9
	0		0
	Lang		Audio / Lang I/II
	TXT		Text / Goto

Original		Replacement	

