



Original	Replacement	Original	Replacement
	Power		CH- / Page-
	Shift + Power		7
	Shift + Vol+		8
	Vol+		9
	Shift + CH+ /		Picture / Format
	Text / Goto		Shift + Exit / Cancel / Clear
	Shift + AV / Input / RDS		0
	Shift + Vol-		AV / Input / RDS
	Vol-		Info / Angle
	Shift + CH- /		I<< / Preset-
	1		>>I / Preset+
	2		<< / Tune-
	3		>> / Tune+
	CH+ / Page+		Stop / Hold
	4		Pause / Step / Freeze
	5		Play / Slow
	6		Sleep / Timer



