



Original	Replacement
 Power	 Power
 Power Tv	 Shift + Power
 Vol+ Tv	 Shift + Vol+
 DVD	 Shift + 2
 TV/AV Tv	 Shift + AV / Input / RDS
 Vol- Tv	 Shift + Vol-
 FM	 TV/Radio /
 1	 1
 2	 2
 3	 3
 EXT-IN	 AV / Input / RDS
 4	 4
 5	 5
 6	 6
 Quick OSD	 Fav / Marker / PC
 7	 7
 8	 8

Original	Replacement
 9	 9
 Vol+	 Vol+
 Cancel	 Exit / Cancel / Clear
 0	 0
 +10	 Guide / EPG / +/-
 Vol-	 Vol-
 I<</Skip Down	 I<< / Preset-
 >>I/Skip Up	 >>I / Preset+
 << Slow Search	 << / Tune-
 Slow Search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Top Menu/Direct Navigator	 D.Menu / Top
 Up	 Up
 Menu/Play List	 Menu / Home
 Left	 Left





Original	Replacement	Original	Replacement
	Enter		OK
	Right		Right
	Functions		Setup / OPT /
	Down		Down
	Return-Setup		Back / Return
	SW.Level		Sound / Title
	EQ		Subtitle / EQ
	C.Focus		Picture / Format
	S.SRD/PLII		Audio / Lang I/II
	FL Display/Sleep		Display / Media
	Test		Text / Goto
	Play Mode/CH Select		Smart / List
	Muting		Mute / Dimmer

Original	Replacement	Original	Replacement

