 



 

 

 







 

 



 

 

















 



















 



 





 
 





 





 

 



 



Original	Replacement	Original	Replacement
	Power		Power
	3D		Shift + 3
	TV		Shift + 1
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Eco		Display / Media
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Info		Info / Angle
	Option		Setup / OPT /
	Smart Tv		Smart / List
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Zoom-		Shift + Down





Original	Replacement
 Zoom+	 Shift + Up
 @/Home	 D.Menu / Top
 Sleep	 Sleep / Timer
 Pre-CH	 Shift + Back / Return
 FAV	 Fav / Marker / PC
 List	 Shift + Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 OO/Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 I<	 I<< / Preset-
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze

Original	Replacement
 >	 >> / Preset+
 <<	 << / Tune-
 Rec	 Rec / Rec Mode
 >>	 >> / Tune+

