

























 









 

 
 




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 Teletext	 Text / Goto
 [112]	 Zoom / Size
 Subtitle	 Subtitle / EQ
 [<>]	 Picture / Format
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 Back	 Back / Return
 OK	 OK
 Right	 Right

Original	Replacement
 Menu/Browse	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Option	 Setup / OPT /
 Vol+	 Vol+
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





Original	Replacement	Original	Replacement
9	9	BLUETOOTH 9	9
MHEG CANCEL	MHEG/Cancel	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear
0	0	HDMI - BAT 0	0
P<=>P	P<=>P	PC FAV MARKER	Fav / Marker / PC
AMBILIGHT	Ambilight	MEDIA DISPLAY	Display / Media
MODE	Mode	LIST SMART	Smart / List

Original	Replacement	Original	Replacement

