



Original	Replacement
	 Power
	 Stop / Hold
	 Pause / Step / Freeze
	 Rec / Rec Mode
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Guide / EPG / -/-
	 Setup / OPT /
	 Picture / Format
	 AV / Input / RDS
	 Exit / Cancel / Clear
	 Menu / Home
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random

Original	Replacement
	 Info / Angle
	 Shift + Setup / OPT / Tools
	 Back / Return
	 Smart / List
	 Up
	 Down
	 Right
	 Left
	 OK
	 Vol+
	 Vol-
	 Mute / Dimmer
	 CH+ / Page+
	 CH- / Page-
	 1
	 2
	 3





Original	Replacement	Original	Replacement
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
MNO 6	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
WXYZ 9	9	BLUETOOTH 9	9
0	0	HDMI - SAT 0	0
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
TEXT	Text	GOTO TEXT	Text / Goto

Original	Replacement	Original	Replacement

