



Original	Replacement
 Power	 Power
 Tuner	 Shift + 1
 CD	 Shift + 2
 CDR / Tape	 Shift + 3
 VCR	 Shift + 4
 TV	 Shift + 5
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Cinema Link	 Media

Original	Replacement
 DVD / 6 CH.	 Pre Ch
 Menu / Guide	 Menu
 Menu / Guide	 Guide
 OK	 Ok
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 Vol +	 Vol +
 Vol -	 Vol -
 Mute	 Mute
 Play	 Play
 Stop	 Stop
 I< Channel/Track	 I<<
 Channel/Track >I	 >>I
 Pause	 Pause
 Disc / FR.D./Index	 Smart





Original	Replacement
Text / Display / T-C	Text
Text / Display / T-C	+ Shift + Info
News / TA	Info
Surr On / Off	Yellow
Smart Sound	Dual
Loudness	Red
Rear Channel +	Ch +
Rear Channel -	Ch -
Surr. Mode	Blue
Test Tone	Green

Original	Replacement





Original	Replacement	Original	Replacement
	Power Tv		Power
	TV		Blue
	Mute Tv		Mute
	1 Tv		1
	2 Tv		2
	3 Tv		3
	4 Tv		4
	5 Tv		5
	6 Tv		6
	7 Tv		7
	8 Tv		8
	9 Tv		9
	0 Tv		0
	Menu/Guide Tv		Menu
	Menu/Guide Tv		Guide
	OK Tv		Ok
	Up Tv		Up
	Down Tv		Down
	Right Tv		Right
	Left Tv		Left
	Vol+ Tv/CD		Vol +
	Vol- Tv/CD		Vol -
	Play Tv		Play
	Stop Tv		Stop
	News/TA Tv		Info
	I< Channel/Track		I<<
	Channel/Track >I		>>I
	Power CD		Shift + Power
	CD		Yellow
	Mute CD		Shift + Mute
	1 CD		Shift + 1
	2 CD		Shift + 2
	3 CD		Shift + 3
	4 CD		Shift + 4





Original		Replacement	
	5 CD	+	Shift + 5
	6 CD	+	Shift + 6
	7 CD	+	Shift + 7
	8 CD	+	Shift + 8
	9 CD	+	Shift + 9
	0 CD	+	Shift + 0
	Up CD	+	Shift + Up
	Down CD	+	Shift + Down
	Right CD	+	Shift + Right
	Left CD	+	Shift + Left
	News/TA CD	+	Shift + Info
	Stop CD	+	Shift + Stop
	Play CD		Pause
	I< CD		<<
	>I CD		>>
	Pause CD	+	Shift + Pause
	Disc / FR.D./Index CD		Smart

Original		Replacement	

 

 

 

 
 





 


 


 
 



 



 

 
 
 




 




Original	Replacement	Original	Replacement
 Power VCR	 Power	 Right VCR	 Right
 VCR	 Yellow	 Left VCR	 Left
 Mute VCR	 Mute	 Vol+ VCR	 Vol +
 1 VCR	 1	 Vol- VCR	 Vol -
 2 VCR	 2	 Play VCR	 Play
 3 VCR	 3	 Stop VCR	 Stop
 4 VCR	 4	 I< Channel/Track VCR	 I<<
 5 VCR	 5	 Channel/Track >I VCR	 >>I
 6 VCR	 6	 Pause VCR	 Pause
 7 VCR	 7	 T·C/Index VCR	 Back
 8 VCR	 8	 Power	 Shift + Power
 9 VCR	 9	 CDR/Tape	 Blue
 0 VCR	 0	 1 CDR/Tape	 Shift + 1
 Menu/Guide	 Menu	 2 CDR/Tape	 Shift + 2
 Up VCR	 Up	 3 CDR/Tape	 Shift + 3
 OK VCR	 Ok	 4 CDR/Tape	 Shift + 4
 Down VCR	 Down	 5 CDR/Tape	 Shift + 5





Original	Replacement	Original	Replacement
 6 CDR/Tape	 +  Shift + 6		
 7 CDR/Tape	 +  Shift + 7		
 8 CDR/Tape	 +  Shift + 8		
 9 CDR/Tape	 +  Shift + 9		
 0 CDR/Tape	 +  Shift + 0		
 Up CDR/Tape	 +  Shift + Up		
 Down CDR/Tape	 +  Shift + Down		
 Right CDR/Tape	 +  Shift + Right		
 Left CDR/Tape	 +  Shift + Left		
 News/TA	 Info		
 I< Channel/Track CDR/Tape	 <<		
 Channel/Track >I CDR/Tape	 >>		
 Pause	 +  Shift + Pause		
 Disc CDR/Tape	 Smart		

Original	Replacement

