




| Original  | Replacement   |
|---|---|
|  Timer Set       |  Sleep / Timer                   |
|  Standby - On    |  Power                           |
|  Prog / System   |  Menu / Home                     |
|  Prog / System   |  TV/Radio /                      |
|  Audio           |  Audio / Lang I/II               |
|  Subtitle        |  Subtitle / EQ                   |
|  Angle           |  Info / Angle                    |
|  Rec             |  Rec / Rec Mode                  |
|  Display         |  Display / Media                 |
|  Zoom            |  Zoom / Size                     |
|  P -            |  CH- / Page-                    |
|  Clear         |  Shift + Exit / Cancel / Clear |
|  Exit / Status |  Exit / Cancel / Clear         |
|  P +           |  CH+ / Page+                   |
|  Title         |  Sound / Title                 |
|  System        |  Smart / List                  |
|  Return        |  Back / Return                 |

| Original   | Replacement   |
|--|---|
|  DVD      |  Shift + 2               |
|  TUNER    |  Shift + 6               |
|  VCR      |  Shift + 4               |
|  VCR Menu |  D.Menu / Top            |
|  Up       |  Up                      |
|  OK       |  OK                      |
|  Left     |  Left                    |
|  Right    |  Right                   |
|  Stop     |  Stop / Hold             |
|  Down     |  Down                    |
|  Play    |  Play / Slow            |
|  << REW |  << / Tune-            |
|  Pause  |  Pause / Step / Freeze |
|  >> FF  |  >> / Tune+            |
|  1      |  1                     |
|  2      |  2                     |
|  3      |  3                     |







| Original  | Replacement   |
|---|---|
|  Timer Set     |  Sleep / Timer           |
|  Standby - On  |  Power                   |
|  Prog / System |  Menu / Home             |
|  Prog / System |  TV/Radio /              |
|  Audio         |  Audio / Lang I/II       |
|  Subtitle      |  Subtitle / EQ           |
|  Angle         |  Info / Angle            |
|  Display       |  Display / Media         |
|  Zoom          |  Zoom / Size             |
|  I<<           |  I<< / Preset-           |
|  Clear        |  Exit / Cancel / Clear  |
|  >>I         |  >>I / Preset+         |
|  Title       |  Shift + Sound / Title |
|  Mode        |  Text / Goto           |
|  Return      |  Back / Return         |
|  DVD         |  Shift + 2             |
|  TUNER       |  Shift + 6             |

| Original  | Replacement  |
|---|--|
|  VCR       |  Shift + 4              |
|  Disc Menu |  D.Menu / Top           |
|  Up        |  Up                     |
|  OK        |  OK                     |
|  Left      |  Left                   |
|  Right     |  Right                  |
|  Stop      |  Stop / Hold            |
|  Down      |  Down                   |
|  Play      |  Play / Slow            |
|  << REW    |  << / Tune-             |
|  Pause    |  Pause / Step / Freeze |
|  >> FF   |  >> / Tune+           |
|  1       |  1                    |
|  2       |  2                    |
|  3       |  3                    |
|  Slow    |  Shift + Play /       |
|  4       |  4                    |























| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |

| Original | Replacement |
|----------|-------------|
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |
|          |             |





| Original  | Replacement   |
|---|---|
|  Standby - On  |  Power         |
|  Prog / System |  TV/Radio /    |
|  Prog / System |  Menu / Home   |
|  Band          |  Smart / List  |
|  I<<           |  CH- / Page-   |
|  I<<           |  I<< / Preset- |
|  >>I           |  CH+ / Page+   |
|  >>I           |  >>I / Preset+ |
|  DVD           |  Shift + 2    |
|  TUNER         |  Shift + 6    |
|  VCR          |  Shift + 4   |
|  Up          |  Up          |
|  OK          |  OK          |
|  Left        |  Left        |
|  Right       |  Right       |
|  Stop        |  Stop / Hold |
|  Down        |  Down        |

| Original  | Replacement   |
|---|---|
|  1         |  1                 |
|  2         |  2                 |
|  3         |  3                 |
|  4         |  4                 |
|  5         |  5                 |
|  6         |  6                 |
|  7         |  7                 |
|  8         |  8                 |
|  9         |  9                 |
|  0         |  0                 |
|  Surround |  Eject / Surround |
|  Sound   |  Sound / Title   |
|  Vol -   |  Vol-            |
|  Vol +   |  Vol+            |

