

 


 





 


 




 




 



 

 

 



 



 


 
 



 

 

 
 




 
 

 


 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol +	 Vol +
 TV	 Red	 Vol -	 Vol -
 DISC	 Green	 Up	 Up
 TUNER	 Yellow	 Left	 Left
 AUX	 Blue	 OK	 Ok
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 I<<	 I<<
 4	 4	 >>I	 >>I
 5	 5	 Stop	 Stop
 6	 6	 Play	 Play
 7	 7	 Pause	 Pause
 8	 8	 I<<	 <<
 9	 9	 >>I	 >>
 0	 0	 Subtitle	 Subt
 Disc Menu	 D. Menu	 Angle	 Smart
 OSD Menu	 Menu	 Zoom	 Eject















Original	Replacement
 TV	 Red
 DISC	 Green
 TUNER	 Yellow
 AUX	 Blue
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 >>	 >>
 >>	 >>

Original	Replacement
  <<	  <<
  <<	 <<
 Up	 Up
 Down	 Down
 OK	 Ok
 Right	 Right
 Prog	 Sleep
 Stop	 Stop

