











 





 





 



Original	Replacement	Original	Replacement
	Power		Power
	Info		Info / Angle
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Guide		Guide / EPG / -/--
	Radio		TV/Radio /
	VOD		Display / Media
	HD		AV / Input / RDS
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Page Up		Shift + CH+ /
	Page Down		Shift + CH- /

Original	Replacement	Original	Replacement
	<<		<< / Tune-
	<<		I<< / Preset-
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	>>		>>I / Preset+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Vol+		Vol+
	Recordings		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4





Original		Replacement		Original		Replacement	
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow / Fav		Yellow / YouTube / Repeat				
	Yellow / Fav		Fav / Marker / PC				
	Blue / Subtitle		Blue / Prime Video / Random				
	Blue / Subtitle		Subtitle / EQ				

