

 
 

 
 
 
 
 

 

 

 



 
 
 



 

 

 
 
 


 

 









 







 




 




 







Original	Replacement	Original	Replacement
	Power		Power
	Tv/DTV		TV/R
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	[i+]		Info
	Mute		Mute
	I-II		Dual
	Home Menu		Menu
	Exit		Exit
	EPG		Guide
	Return		Back
	Vol+		Vol +
	Vol-		Vol -
	PR+		Ch +
	PR-		Ch -
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[...]		Subt
	[≡?]		Eject





Original	Replacement	Original	Replacement
 [=i]	 LIST List		
 Text	 REPEAT TEXT Text		
 PC	 APP MEDIA Media		
 [<l>]	 ECO 3D 3D		
 [=*]	 PICTURE FORMAT Format		
 HDMI Control	 HOME SMART Smart		
 1	 SHIFT + <b>1</b> Shift + 1		
 2	 SHIFT + <b>2</b> Shift + 2		
 3	 SHIFT + <b>3</b> Shift + 3		
 4	 SHIFT + <b>4</b> Shift + 4		
 5	 SHIFT + <b>5</b> Shift + 5		

