





 



Original	Replacement	Original	Replacement
 Power	 Power	 FAV-	 Shift + CH- /
 Mute	 Mute / Dimmer	 CH+	 CH+ / Page+
 1	 1	 P.Mode	 Picture / Format
 2	 2	 Vol+	 Vol+
 3	 3	 CH-	 CH- / Page-
 4	 4	 S.Mode	 Sound / Title
 5	 5	 Vol-	 Vol-
 6	 6	 Source	 AV / Input / RDS
 7	 7	 Sleep	 Sleep / Timer
 8	 8	 Aspect	 Shift + Picture / Format
 9	 9	 Info	 Info / Angle
 -/--	 Shift + Guide / EPG / -/--	 Up	 Up
 0	 0	 Left	 Left
 Recall	 Back / Return	 OK	 OK
 Audio	 Audio / Lang I/II	 Right	 Right
 FAV+	 Shift + CH+ /	 Menu	 Menu / Home
 FAV	 Fav / Marker / PC	 Down	 Down





Original		Replacement	
	Exit		Exit / Cancel / Clear
	Text		Text / Goto
	Index		Display / Media
	Play/Mix		Play / Slow
	Pause		Pause / Step / Freeze
	Stop/Reveal		Stop / Hold
	<</Hold		<< / Tune-
	<</Hold	 + 	Shift + Stop /
	>>/Subpage		>> / Tune+
	Size		Zoom / Size
	l<<		l<< / Preset-
	>>l/Cancel		>>l / Preset+
	T-Shift		Smart / List
	Tv/Radio		TV/Radio /
	Rec		Rec / Rec Mode
	EPG		Guide / EPG / -/--
	Red		Red / Netflix / Search

Original		Replacement	
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

