













 





Original	Replacement	Original	Replacement
 Power	 Power	 Jump	 Smart / List
 S.Mode	 Sound / Title	 .	 Display / Media
 MTS	 Text / Goto	 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format	 Input	 AV / Input / RDS
 Caption	 Subtitle / EQ	 Vol+	 Vol+
 Sleep	 Sleep / Timer	 Vol-	 Vol-
 P.Size	 Zoom / Size	 CH+	 CH+ / Page+
 1	 1	 CH-	 CH- / Page-
 2	 2	 Guide	 Guide / EPG / -/-
 3	 3	 Exit	 Exit / Cancel / Clear
 4	 4	 Up	 Up
 5	 5	 Down	 Down
 6	 6	 Down	 Shift + Down
 7	 7	 Left	 Left
 8	 8	 OK	 OK
 9	 9	 Info	 Info / Angle
 0	 0	 Menu	 Menu / Home





Original	Replacement
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Smart / List
	 Fav / Marker / PC
	 Shift + Sleep / Timer
	 Pause / Step / Freeze

Original	Replacement

