









 






 














 

 

 

 





 

 

 

 





 




 


Original	Replacement
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 Shift + Back / Return
	 7
	 8
	 9
	 0
	 Menu / Home
	 Up
	 Guide / EPG / -/--

Original	Replacement
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Display / Media
	 Vol+
	 Shift + Fav / Marker / PC
	 CH+ / Page+
	 Vol-
	 AV / Input / RDS
	 CH- / Page-
	 Shift + 2
	 Shift + 1
	 Text / Goto
	 Shift + Text /
	 Info / Angle



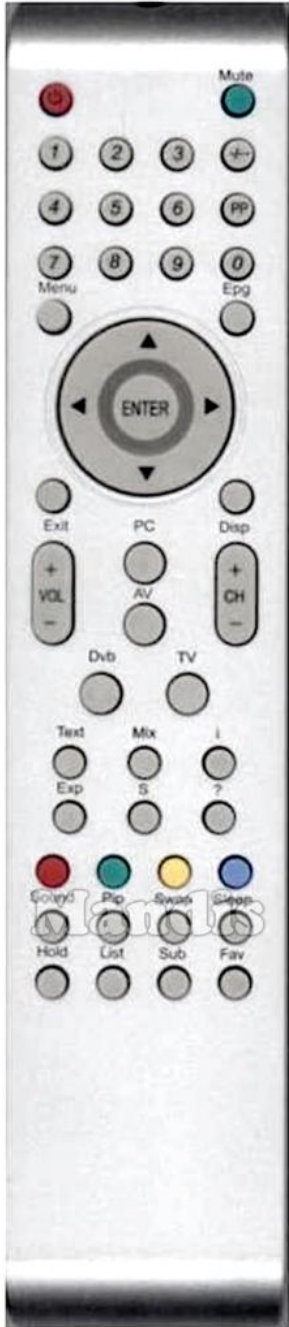

Original	Replacement
Exp	REC MODE Rec / Rec Mode
S	STEP - FREEZE Pause / Step / Freeze
?	SLOW Play / Slow
Red	NETFLIX SEARCH Red / Netflix / Search
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random
Sound	TITLE SOUND Sound / Title
PIP	FORMAT PICTURE Picture / Format
Swap	RETURN BACK Back / Return
Sleep	TIMER SLEEP Sleep / Timer
Hold	HOLD Stop / Hold
List	LIST SMART Smart / List
Sub	EQ SUBTITLE Subtitle / EQ
Fav	PC FAV MARKER Fav / Marker / PC

Original	Replacement

