










































 



 













 



 
 


Original	Replacement	Original	Replacement
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Still	 Pause / Step / Freeze	Menu Up	 Up
Txt Stop	 Stop / Hold	Info	 Info / Angle
Tune-	 << / Tune-	Menu Left	 Left
Tune+	 >> / Tune+	OK Enter	 OK
Tone-	 I<< / Preset-	Menu Right	 Right
Tone+	 >>I / Preset+	Back	 Exit / Cancel / Clear
Menu audio	 Audio / Lang I/II	Menu Down	 Down
Subt.List	 Subtitle / EQ	Swap	 Back / Return
Bright+ Mode	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	View	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-
Update	 D.Menu / Top	Display	 Display / Media
Help	 Setup / OPT /	Chan.Down	 CH- / Page-
Text	 Text / Goto	1	 1



Original	Replacement	Original	Replacement
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
Guide -/-- 1.	 Guide / EPG / -/--		
0/10	 0		
2.Fav P/C 2.	 Fav / Marker / PC		
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		
Blue	 Blue / Prime Video / Random		
On/Off	 +  Shift + Power		
Mix Scan	 +  Shift + Text / Goto		

Goto

Original	Replacement
AV 2	 +  Shift + AV / Input / RDS
Audio+	 +  Shift + Vol+
Audio-	 +  Shift + Vol-
Disp	 +  Shift + Display / Media
On Pip	 +  Shift + 1
Dim Pip	 +  Shift + 2
Rotate Pip	 +  Shift + 3
Search	 +  Shift + Red / Netflix /

