







 





 

 

 

 



 



 

 

 

 

 

 



 



















 









Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol-
	Source (Games)		AV / Input / RDS		World/Internet		Smart / List
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Q.Menu		D.Menu / Top
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		i		Info / Angle
	Recall		Fav / Marker / PC		Movie-Music-Phot		Display / Media
	Vol+		Vol+		Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		*/o		Picture / Format
	PR+		CH+ / Page+		*/o..		Setup / OPT /





Original	Replacement	Original	Replacement
 [≡]/Text	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Lang	 Audio / Lang I/II		
 [≡]..	 Subtitle / EQ		
 [-o-]	 Zoom / Size		
 <<	 << / Tune-		
 Pause	 Pause / Step / Freeze		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Stop	 Stop / Hold		

