 



 




 



 
 
 


 

 
 
 
 



 
 












 



 



 

 




 


 

 
 
 








Original	Replacement	Original	Replacement
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Mute		Mute
	Internet		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	i/Info		Info
	Music/Photo/Phot		Options
	Guide		Guide
	[≡]/Text		Text
	*/O		Format





Original	Replacement	Original	Replacement
 */Q	 3D		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Lang	 Dual		
 [≡]..	 Subt		
 Rec	 Rec		
 [-o-]	 Eject		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		

