



| Original | Replacement | Original | Replacement |
|--|--|---|--|
|  Standby |  Power |  Aspect |  Shift + Picture / Format |
|  Auto |  Smart / List |  Nicam |  Audio / Lang I/II |
|  Mute |  Mute / Dimmer |  Display |  Display / Media |
|  1 |  1 |  CH+ |  CH+ / Page+ |
|  2 |  2 |  CH- |  CH- / Page- |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Left |  Left |
|  5 |  5 |  Enter |  OK |
|  6 |  6 |  Right |  Right |
|  7 |  7 |  Down |  Down |
|  8 |  8 |  LCD Menu |  Menu / Home |
|  9 |  9 |  Exit |  Exit / Cancel / Clear |
|  0 |  0 |  Input |  AV / Input / RDS |
|  -/-- |  Shift + Guide / EPG / -/-- |  PMode |  Picture / Format |
|  Recall |  Back / Return |  SMode |  Sound / Title |
|  Vol+ |  Vol+ |  Sleep |  Sleep / Timer |
|  Vol- |  Vol- |  Fav |  Fav / Marker / PC |





| | Original | Replacement | Original | Replacement |
|--|---|---|----------|-------------|
| |  |  I<< / Preset- | | |
| |  |  Guide / EPG / -/-- | | |
| |  |  Text / Goto | | |
| |  |  >>I / Preset+ | | |
| |  |  Stop / Hold | | |
| |  |  Shift + Audio / Lang I/II | | |
| |  |  Subtitle / EQ | | |
| |  |  Info / Angle | | |
| |  |  Zoom / Size | | |
| |  |  TV/Radio / | | |
| |  |  Eject / Surround | | |
| |  |  Red / Netflix / Search | | |
| |  |  Green / APP / Repeat | | |
| |  |  Yellow / YouTube / Repeat | | |
| |  |  Blue / Prime Video / Random | | |
| | | | | |
| | | | | |

