



| Original | Replacement | Original | Replacement |
|----------|-----------------|----------|------------------------|
| PWR | Power | TV/Rad | TV/Radio / |
| TV/STB | Display / Media | 1 | 1 |
| 2 | 2 | 3 | 3 |
| 4 | 4 | 5 | 5 |
| 6 | 6 | 7 | 7 |
| 8 | 8 | 9 | 9 |
| Back | Back / Return | 0 | 0 |
| Mute | Mute / Dimmer | Red | Red / Netflix / Search |
| OPT | Setup / OPT / | | |

| Original | Replacement | Original | Replacement |
|--------------|-----------------------------|----------|-------------------|
| Green | Green / APP / Repeat | A/V+ | AV / Input / RDS |
| Yellow / FAV | Yellow / YouTube / Repeat | FAV | Fav / Marker / PC |
| Blue / A-Z | Blue / Prime Video / Random | Menu | Menu / Home |
| Blue / A-Z | Shift + Blue / Prime | EPG | Guide / EPG / -/- |
| Info | Info / Angle | Up | Up |
| Left | Left | Right | Right |
| Down | Down | Vol+ | Vol+ |
| Exit | Exit / Cancel / Clear | PR/CH+ | CH+ / Page+ |
































 

 







 

| Original | | Replacement | |
|----------|-----------|-------------|---------------------------|
| | Vol- | | Vol- |
| | PR/CH- | | CH- / Page- |
| | Pause | | Pause / Step / Freeze |
| | Play | | Play / Slow |
| | << | | << / Tune- |
| | Stop | | Stop / Hold |
| | >> | | >> / Tune+ |
| | Rec | | Rec / Rec Mode |
| | >/Slow | + | Shift + Play / |
| | [:=]/List | | Smart / List |
| | A-B | + | Shift + YouTube / |
| | Mark | + | Shift + Fav / Marker / PC |
| | Jump | | Text / Goto |
| | PIP | + | Shift + OK |
| | Swap | + | Shift + Left |
| | Move | + | Shift + Right |
| | Sleep | | Sleep / Timer |

| Original | | Replacement | |
|----------|--|-------------|--|
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |






















| Original | Replacement | |
|--------------|---|-----------------------|
| PWR On/Off |  | Power |
| East |  | D.Menu / Top |
| TV |  +  Shift + 1 | |
| Dec/Pause |  | Pause / Step / Freeze |
| Alt/16:9 |  | Picture / Format |
| H/V Play |  | Play / Slow |
| Opt? |  | Setup / OPT / |
| FAV Pref. |  | Fav / Marker / PC |
| 4ghi |  | 4 |
| Guide Pilote |  +  Shift + Guide / EPG / -/- | |
| 9wxyz |  | 9 |
| 8tuv |  | 8 |
| 7pqrm |  | 7 |
| 6mno |  | 6 |
| 3def |  | 3 |
| 5jkl |  | 5 |
| 2abc |  | 2 |

| Original | Replacement | |
|---------------|--|-----------------------------|
| 1. ? |  | 1 |
| Yellow |  REPEAT A-B | Yellow / YouTube / Repeat |
| LNB F.Forward |  | >> / Tune+ |
| Lang./Rewind |  | << / Tune- |
| TV/SAT |  | AV / Input / RDS |
| West |  | >>I / Preset+ |
| Dev |  | I<<< / Preset- |
| 0/10 |  | 0 |
| Video |  +  Shift + 4 | |
| Red |  | Red / Netflix / Search |
| Green |  | Green / APP / Repeat |
| Blue |  | Blue / Prime Video / Random |
| Freeze |  +  Shift + Pause / Step / | |
| Menu Up |  | Up |
| Mute |  | Mute / Dimmer |
| Epg |  | Guide / EPG / -/- |
| App |  +  Shift + Green / APP / Repeat | |





| Original | Replacement | |
|-------------|---|-----------------------|
| Info |  | Info / Angle |
| Subt.List |  | Subtitle / EQ |
| Sleep Timer |  | Sleep / Timer |
| Text |  | Text / Goto |
| Zoom |  | Zoom / Size |
| Menu |  | Menu / Home |
| Display |  | Display / Media |
| Menu Left |  | Left |
| OK Enter |  | OK |
| Menu Right |  | Right |
| Exit |  | Exit / Cancel / Clear |
| Menu Down |  | Down |
| Back |  | Back / Return |
| Volume+ |  | Vol+ |
| CH/Page+ |  | CH+ / Page+ |
| Volume- |  | Vol- |
| Audio |  | Audio / Lang I/II |

| Original | Replacement | |
|----------|---|-------------|
| CH/Page- |  | CH- / Page- |

