








 




 

 


 











 
 
 



 

 

 
 







 












Original		Replacement		Original		Replacement	
	Power		Power		Up / CH+		Ch +
	Mute		Mute		Down / CH-		Down
	1		1		Down / CH-		Ch -
	2		2		Right / Vol+		Right
	3		3		Right / Vol+		Vol +
	4		4		Left / Vol-		Left
	5		5		Left / Vol-		Vol -
	6		6		[≡i]		Info
	7		7		Mix		Shift + Text
	8		8		Brightness		Shift + 1
	9		9		Contrast		Shift + 2
	0		0		Color		Shift + 3
	AV		AV		Menu		Menu
	-/--		Guide		Red		Red
	TV TX		Text		Green		Green
	OK		Ok		Yellow		Yellow
	Up / CH+		Up		Blue		Blue





Original	Replacement	Original	Replacement
Stop	Stop		
Reveal	Play		
Update	Pause		
Clock	Options		
Sub	Subt		
Double	Dual		
Stereo A B	I<<		
Stereo Sol	<<		
Stereo Fa	>>		
Stereo ▽	>>I		
Stereo PS	List		

