






































 


Original	Replacement
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Info / Angle
	 0
	 Guide / EPG / -/-
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+

Original	Replacement
	 Vol-
	 Menu / Home
	 CH- / Page-
	 Up
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 I<< / Preset-
	 << / Tune-
	 >> / Tune+
	 >> / Preset+
	 Rec / Rec Mode
	 Stop / Hold
	 Play / Slow





Original	Replacement
 Pause	 Pause / Step / Freeze
 Red/A	 Red / Netflix / Search
 Green/B	 Green / APP / Repeat
 Yellow/C	 Yellow / YouTube / Repeat
 Blue/D	 Blue / Prime Video / Random
 List	 Smart / List
 Media	 Display / Media
 DVD	 Shift + 2
 Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 [≡]	 Text / Goto
 [*]	 Setup / OPT /

Original	Replacement

