



Original	Replacement	Original	Replacement
 Standby	 Power	 Pic.Mode	 Picture / Format
 Mute	 Mute / Dimmer	 S.Mode	 Sound / Title
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 Menu	 Menu / Home
 8	 8	 Source	 AV / Input / RDS
 9	 9	 Vol+	 Vol+
 CH.List	 Smart / List	 Tv/Radio	 TV/Radio /
 0	 0	 CH+	 CH+ / Page+
 Recall	 Back / Return	 Vol-	 Vol-
 Aspect	 Shift + Picture / Format	 Display	 Display / Media
 Sleep	 Sleep / Timer	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Red	 Red / Netflix / Search





Original	Replacement
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Rec / Rec Mode
	D.Menu / Top
	Shift + Sleep / Timer
	Shift + Rec / Rec Mode
	Info / Angle
	Setup / OPT /
	Text / Goto
	Subtitle / EQ
	Shift + Stop /
	Play / Slow
	Zoom / Size
	Pause / Step / Freeze
	Stop / Hold
	I<< / Preset-

Original	Replacement
	>>I / Preset+
	<< / Tune-
	>> / Tune+

