
















































 




















Original	Replacement	Original	Replacement
 Power	 Power	 Pause	 Pause / Step / Freeze
 Mute	 Mute / Dimmer	 EPG	 Guide / EPG / -/-
 1	 1	 Up/PR+	 Up
 2	 2	 Menu	 Menu / Home
 3	 3	 Left	 Left
 Tv/Radio	 TV/Radio /	 Vol-	 Vol-
 4	 4	 OK/List	 OK
 5	 5	 Right	 Right
 6	 6	 Vol+	 Vol+
 ↑	 CH+ / Page+	 Info	 Info / Angle
 7	 7	 Down/PR-	 Down
 8	 8	 Exit	 Exit / Cancel / Clear
 9	 9	 [+]	 Zoom / Size
 ↓	 CH- / Page-	 FAV	 Fav / Marker / PC
 0	 0	 Record	 Rec / Rec Mode
 ←PR	 Back / Return	 Stop	 Stop / Hold
 PAL/NTSC	 Picture / Format	 Audio	 Audio / Lang I/II





Original	Replacement
TXT	Text / Goto
Subtitle	Subtitle / EQ
Audio L/R	Sound / Title
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Replacement

