



















 

 





 





Original	Replacement
 Standby	 Power
 Source	 AV / Input / RDS
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 e	 Info / Angle
 Mouse	 Smart / List
 Home	 Shift + Menu /
 TXT	 Text / Goto
 Mix/FAV.List	 Fav / Marker / PC
 Size/Subtitle	 Subtitle / EQ
 Cancel/Audio	 Audio / Lang I/II
 Record	 Rec / Rec Mode
 <</Index	 << / Tune-
 >>/Hold	 >> / Tune+
 I<</Reveal	 I<< / Preset-

Original	Replacement
 >>I/Subpage	 >>I / Preset+
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Enter	 OK
 Right	 Right
 Play/Pause / Timeshift	 Pause / Step / Freeze
 Play/Pause / Timeshift	 Play / Slow
 Down	 Down
 Stop / EPG	 Stop / Hold
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-





Original		Replacement		Original		Replacement	
1	1	TV 1	1				
2	2	DVD 2	2				
3	3	CD - STB 3	3				
4	4	VIDEO 4	4				
5	5	TAPE 5	5				
6	6	TUNER 6	6				
7	7	AUX - HDD 7	7				
8	8	USB 8	8				
9	9	BLUETOOTH 9	9				
DISPLAY	[ *]/Display	MEDIA DISPLAY	Display / Media				
0	0	HDMI - BAT 0	0				
RECALL	Recall	RETURN BACK	Back / Return				

