



Original	Replacement	Original	Replacement
Power	Power	0	0
Setup	Setup / OPT /	Movie	Display / Media
DTV	D.Menu / Top	Music	Smart / List
1	1	Photo	Picture / Format
2	2	Vol-	Vol-
3	3	Vol+	Vol+
HDMI/AV	AV / Input / RDS	Up	Up
4	4	Left	Left
5	5	Enter	OK
6	6	Right	Right
Disc	Shift + 3	Exit	Exit / Cancel / Clear
7	7	Down	Down
8	8	Home	Menu / Home
9	9	Edit	Back / Return
Rec	Rec / Rec Mode	Copy	Shift + Smart / List
EPG	Guide / EPG / -/--	Repeat	Green / APP / Repeat
TTX	Text / Goto	<< / Tune-	<< / Tune-



