 












Original	Replacement	Original	Replacement
 Power	 Power	 Movie	 Red
 Setup	 Options	 Music	 Green
 DTV	 D. Menu	 Photo	 Yellow
 HDMI/AV	 AV	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 Disk	 List	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Exit	 Exit
 7	 7	 Home	 Smart
 8	 8	 Edit	 TV/R
 9	 9	 Copy	 3D
 0	 0	 Repeat	 Shift + Text
 TTX	 Text	 Rec	 Rec
 EPG	 Guide	 Play	 Play

Original	Replacement	Original	Replacement
 Power	 Power	 Movie	 Red
 Setup	 Options	 Music	 Green
 DTV	 D. Menu	 Photo	 Yellow
 HDMI/AV	 AV	 Vol +	 Vol +
 1	 1	 Vol -	 Vol -
 Disk	 List	 Up	 Up
 2	 2	 Down	 Down
 3	 3	 Right	 Right
 4	 4	 Left	 Left
 5	 5	 Enter	 Ok
 6	 6	 Exit	 Exit
 7	 7	 Home	 Smart
 8	 8	 Edit	 TV/R
 9	 9	 Copy	 3D
 0	 0	 Repeat	 Shift + Text
 TTX	 Text	 Rec	 Rec
 EPG	 Guide	 Play	 Play





Original		Replacement		Original	Replacement
	Pause		Pause		
	Stop		Stop		
	<</Rev		<<		
	>>/FF		>>		
	>>I		>>I		
	I<<		I<<		
	PG Up		Ch +		
	Pg Dn		Ch -		
	Audio		Dual		
	Sub-T		Subt		
	FAV		Pre Ch		
	Info		Info		
	Mute		Mute		
	DVD		Blue		
	Timer		Shift + AV		
	T/R		Format		

